



INSTALLATION NOTES:


1. FOOTING MATERIALS & INSTALLATION BY OTHERS. TOOLS BY OTHERS.
2. ANCHOR BOLTS PROVIDED.
3. CHOOSE DIRECTION WAYNE TYLER LOGO ON BOLLARD WALL SHOULD FACE. CAST-IN OR CORE DRILL (3) 1 1/2" DIA. x 5" DEEP GROUT POCKETS INTO FOOTING PER ANCHOR BOLT PATTERN.
4. TAKE (3) 1/2" DIA. x 4 1/2" LONG ANCHOR BOLTS AND SCREW AN INCH DEEP INTO (3) 1/2" DIA. S.S. THREADED INSERTS, LEAVING 3 1/2" OF THE ANCHOR BOLT EXPOSED.
5. FILL ALL GROUT POCKETS WITH NON-SHRINK GROUT. INSERT BOLLARD WITH ANCHOR BOLTS INTO GROUT POCKETS.

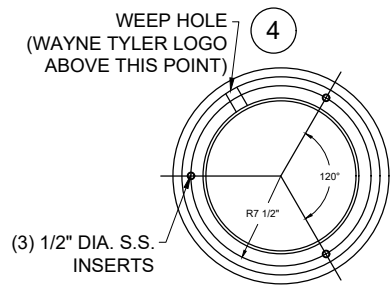


**ANCHOR BOLT
PATTERN**

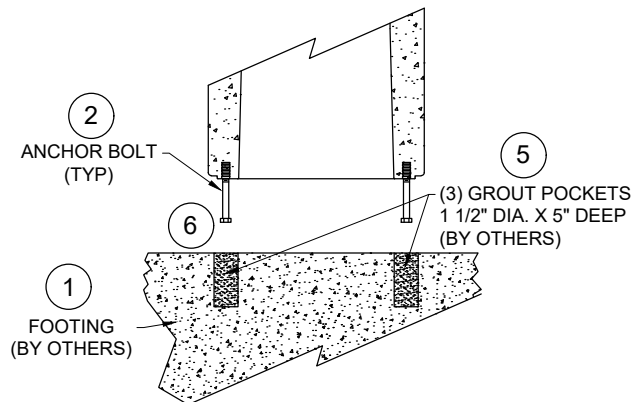

BOLLARD MOUNT DETAIL

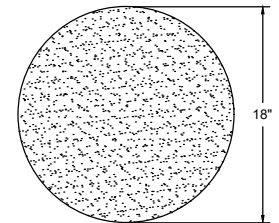

PLAN VIEW

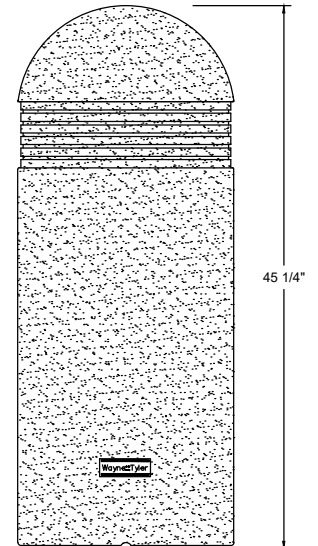

ELEVATION

Wayne :: Tyler

INSTALLATION DRAWING

18" DIA X 42" TALL NON-LIT CONCRETE BOLLARD WITH DOMED TOP

SERIES: 213NL

FILE #: WT-213-NL-INSTALL-1225-00

SCALE: N.T.S.

DRAWN: JMP

DATE: 12/16/25