



INSTALLATION NOTES:

1. FOOTING MATERIALS & INSTALLATION BY OTHERS. TOOLS BY OTHERS.
2. ANCHOR BOLTS PROVIDED.
3. CHOOSE DIRECTION WAYNE TYLER LOGO ON BOLLARD WALL SHOULD FACE. CAST-IN OR CORE DRILL (3) 1 1/2" DIA. x 5" DEEP GROUT POCKETS INTO FOOTING PER ANCHOR BOLT PATTERN.
4. TAKE (3) 1/2" DIA. x 4 1/2" LONG ANCHOR BOLTS AND SCREW AN INCH DEEP INTO (3) 1/2" DIA. S.S. THREADED INSERTS, LEAVING 3 1/2" OF THE ANCHOR BOLT EXPOSED.
5. FILL ALL GROUT POCKETS WITH NON-SHRINK GROUT. INSERT BOLLARD WITH ANCHOR BOLTS INTO GROUT POCKETS.

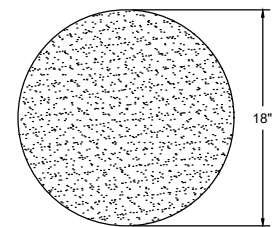


PLAN VIEW

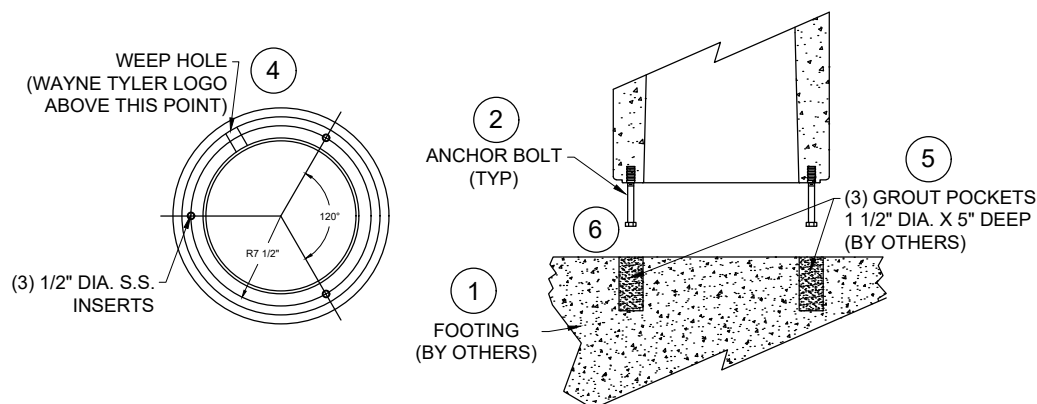

ANCHOR BOLT
PATTERN

BOLLARD MOUNT DETAIL

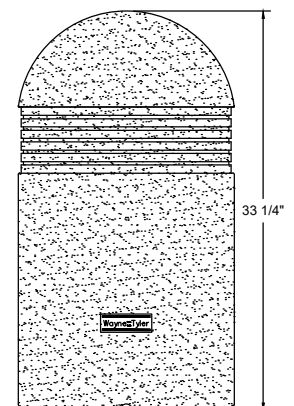

ELEVATION

18" DIA X 33 1/4" TALL NON-LIT CONCRETE BOLLARD WITH DOMED TOP	SCALE: N.T.S.
SERIES: 214NL	DRAWN: JMP
FILE #: WT-214-NL-INSTALL-0126-00	DATE: 01/13/26