



INSTALLATION NOTES:


1. FOOTING MATERIALS & INSTALLATION BY OTHERS. TOOLS BY OTHERS.
2. ANCHOR BOLTS PROVIDED.
3. SEE DETAIL FOR ANCHOR BOLT PATTERN.
4. CHOOSE DIRECTION WAYNE TYLER LOGO ON BOLLARD WALL SHOULD FACE. CAST-IN OR CORE DRILL (4) 1 1/2" DIA. x 5" DEEP GROUT POCKETS INTO FOOTING PER ANCHOR BOLT PATTERN.
5. TAKE (4) 1/2" DIA. x 4 1/2" LONG ANCHOR BOLTS AND SCREW AN INCH DEEP INTO (4) 1/2" DIA. S.S. THREADED INSERTS, LEAVING 3 1/2" OF THE ANCHOR BOLT EXPOSED.
6. FILL ALL GROUT POCKETS WITH NON-SHRINK GROUT. INSERT BOLLARD WITH ANCHOR BOLTS INTO GROUT POCKETS.

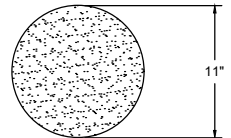


PLAN VIEW

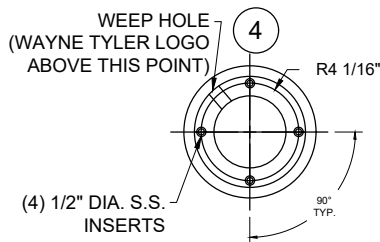

ANCHOR BOLT
PATTERN

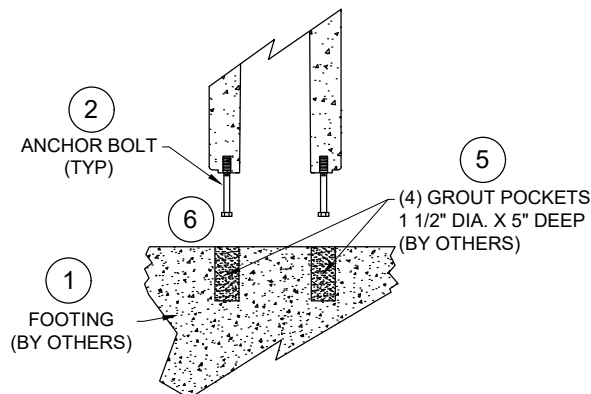

BOLLARD MOUNT DETAIL

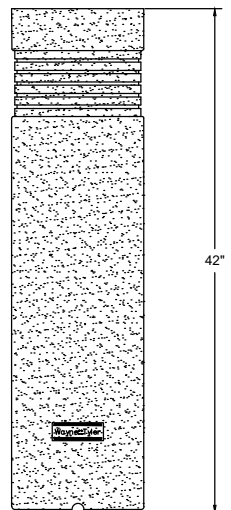

ELEVATION

11" DIA X 42" TALL NON-LIT CONCRETE BOLLARD WITH FLAT TOP	SCALE: N.T.S.
SERIES: 240NL	DRAWN: JMP
FILE #: WT-240NL-INSTALL-0126-00	DATE: 01/13/26