



INSTALLATION NOTES:


1. FOOTING MATERIALS & INSTALLATION BY OTHERS. TOOLS BY OTHERS.
2. ANCHOR BOLTS PROVIDED.
3. (BY OTHERS)
4. CHOOSE DIRECTION WAYNE TYLER LOGO ON BOLLARD WALL SHOULD FACE. CAST-IN OR CORE DRILL (4) 1-1/2" DIA. X 5" DEEP GROUT POCKETS INTO FOOTING PER ANCHOR BOLT PATTERN.
5. TAKE (4) 1/2" DIA. X 4-1/2" LONG ANCHOR BOLTS AND SCREW AN INCH DEEP INTO (4) 1/2" DIA. S.S. THREADED INSERTS, LEAVING 3-1/2" OF THE ANCHOR BOLT EXPOSED.
6. FILL ALL GROUT POCKETS WITH NON-SHRINK GROUT. INSERT BOLLARD WITH ANCHOR BOLTS INTO GROUT POCKETS.




PLAN VIEW

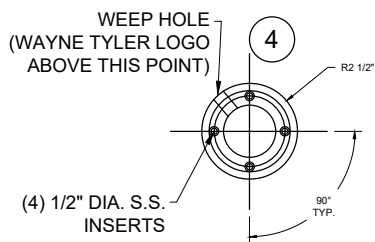

ANCHOR BOLT
PATTERN

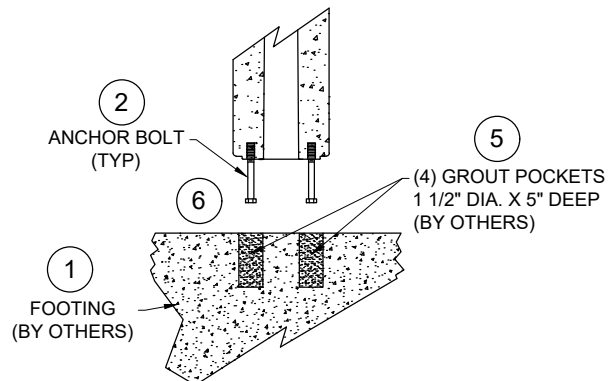

BOLLARD MOUNT DETAIL

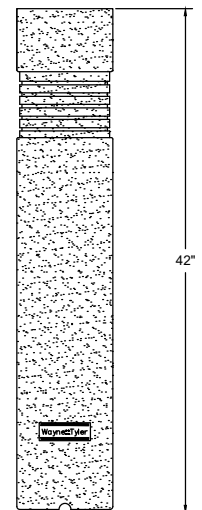

ELEVATION

8" DIA X 42" TALL NON-LIT CONCRETE BOLLARD WITH FLAT TOP	SCALE: N.T.S.
SERIES: 280NL	DRAWN: JMP
FILE #: WT-280NL-INSTALL-0226-00	DATE: 02/24/26