



INSTALLATION NOTES:


1. FOOTING MATERIALS & INSTALLATION BY OTHERS. TOOLS BY OTHERS.
2. ANCHOR BOLTS PROVIDED.
3. (BY OTHERS)
4. CHOOSE DIRECTION WAYNE TYLER LOGO ON BOLLARD WALL SHOULD FACE. CAST-IN OR CORE DRILL (4) 1 1/2" DIA. X 5" DEEP GROUT POCKETS INTO FOOTING PER ANCHOR BOLT PATTERN.
5. TAKE (4) 1/2" DIA. X 4 1/2" LONG ANCHOR BOLTS AND SCREW AN INCH DEEP INTO (4) 1/2" DIA. S.S. THREADED INSERTS, LEAVING 3 1/2" OF THE ANCHOR BOLT EXPOSED.
6. FILL ALL GROUT POCKETS WITH NON-SHRINK GROUT. INSERT BOLLARD WITH ANCHOR BOLTS INTO GROUT POCKETS.

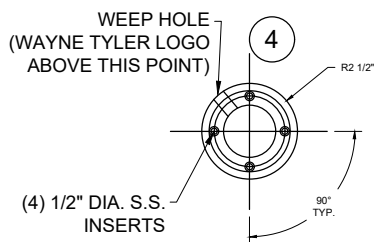


ANCHOR BOLT
PATTERN

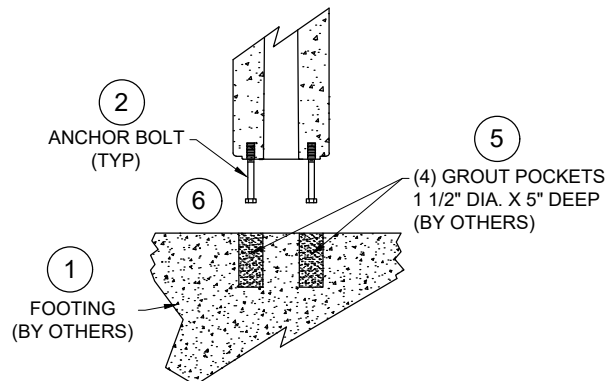

BOLLARD MOUNT DETAIL



PLAN VIEW

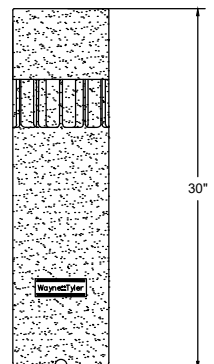

ELEVATION

Wayne :: Tyler

INSTALLATION DRAWING

8" DIA X 30" TALL NON-LIT CONCRETE BOLLARD WITH FLAT TOP

SERIES: 286NL

FILE #: WT-286NL-INSTALL-0226-01

SCALE: N.T.S.

DRAWN: JMP

DATE: 02/24/26