


INSTALLATION NOTES:

1. FOOTING MATERIALS & INSTALLATION BY OTHERS. TOOLS BY OTHERS.
2. SCREWS AND BOLTS PROVIDED. LIGHT ELEMENT AND LIGHTING POWER ASSEMBLY PROVIDED. (SHIPPED SEPARATELY).
3. MAKE CONDUIT AND WIRING AVAILABLE THROUGH PIPE TO TOP OF BOLLARD INTERIOR.
4. CHOOSE DIRECTION WAYNE TYLER LOGO ON BOLLARD WALL SHOULD FACE. CAST-IN OR CORE DRILL (4) 1 1/2" DIA. X 5" DEEP GROUT POCKETS INTO FOOTING PER ANCHOR BOLT PATTERN.
5. TAKE (4) 1/2" DIA. X 4 1/2" LONG ANCHOR BOLTS AND SCREW AN INCH DEEP INTO (4) 1/2" DIA. S.S. THREADED INSERTS, LEAVING 3 1/2" OF THE ANCHOR BOLT EXPOSED.
6. FILL ALL GROUT POCKETS WITH NON-SHRINK GROUT. INSERT BOLLARD WITH ANCHOR BOLTS INTO GROUT POCKETS.
7. TAKE LIGHT POWER ASSEMBLY AND WITH POWER SOURCE DISCONNECTED, ENSURE GROUND WIRE IS CONNECTED APPROPRIATELY.
8. MAKE WET LOCATION CONNECTIONS WITH AC WIRES AT THE AC-IN SIDE OF THE DRIVER. WHITE IS NEUTRAL, BLACK IS POSITIVE.
9. MAKE WET LOCATION DIMMING AND DMX CONNECTIONS IF REQUIRED/APPROPRIATE.
10. APPLY A BEAD OF CLEAR SILICONE SEALANT TO THE TOP RIM OF THE BOLLARD BODY.
11. PLACE THE BASEPLATE / LIGHT POWER ASSEMBLY TO THE INSIDE LEDGE OF THE BOLLARD BODY WITH (4) 1/4" X 1" SCREWS AND (4) 1/4" FLAT WASHERS.
12. TEST TO ENSURE OPERATION.
13. APPLY A BEAD OF CLEAR SILICONE SEALANT TO THE BOTTOM OF THE ACRYLIC LENS AND PLACE LENS CENTERED ON TOP OF BASEPLATE / LIGHT POWER ASSEMBLY.
14. MOUNT THE CAST ALUMINUM DOME TOP TO THE BASEPLATE/ LIGHT POWER ASSEMBLY WITH (4) 1/4" - 20 X 1/4" L SET SCREWS.

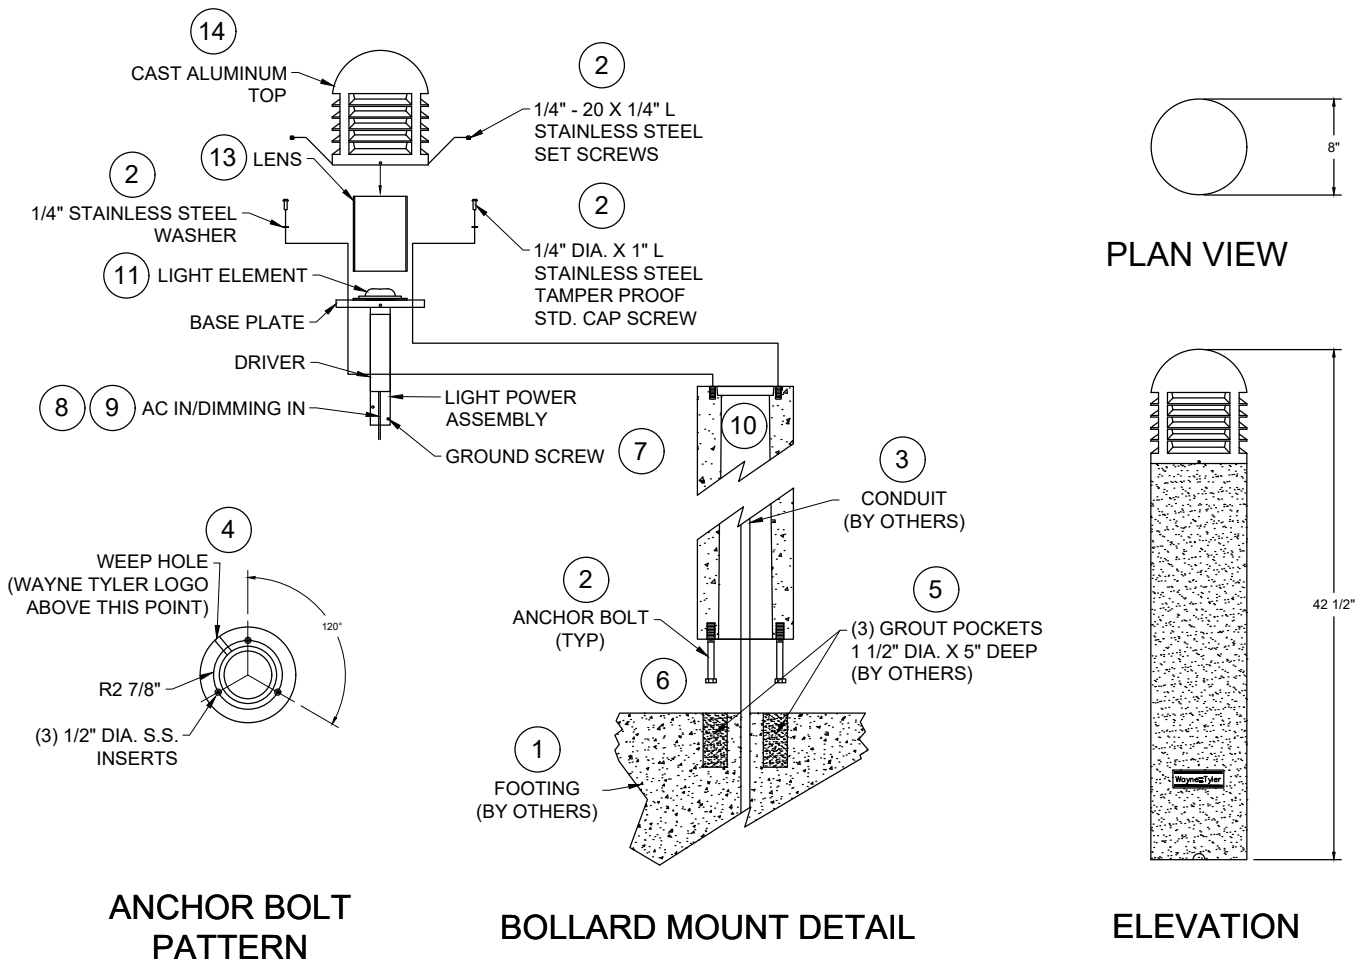

8" DIA X 42 1/2" TALL CONCRETE BOLLARD WITH CAST ALUMINUM DOMED TOP	SCALE: N.T.S.
SERIES: 513	DRAWN: JMP
FILE #: WT-513-INSTALL-0326-00	DATE: 03/11/26