


INSTALLATION NOTES:

1. FOOTING MATERIALS & INSTALLATION BY OTHERS. TOOLS BY OTHERS.
2. SCREWS AND BOLTS PROVIDED. LIGHT ELEMENT AND LIGHTING POWER ASSEMBLY PROVIDED. (SHIPPED SEPARATELY).
3. MAKE CONDUIT AND WIRING AVAILABLE THROUGH PIPE TO TOP OF BOLLARD INTERIOR.
4. CHOOSE DIRECTION WAYNE TYLER LOGO ON BOLLARD WALL SHOULD FACE. CAST-IN OR CORE DRILL (4) 1 1/2" DIA. X 5" DEEP GROUT POCKETS INTO FOOTING PER ANCHOR BOLT PATTERN.
5. TAKE (4) 1/2" DIA. X 4 1/2" LONG ANCHOR BOLTS AND SCREW AN INCH DEEP INTO (4) 1/2" DIA. S.S. THREADED INSERTS, LEAVING 3 1/2" OF THE ANCHOR BOLT EXPOSED.
6. FILL ALL GROUT POCKETS WITH NON-SHRINK GROUT. INSERT BOLLARD WITH ANCHOR BOLTS INTO GROUT POCKETS.
7. TAKE LIGHT POWER ASSEMBLY AND WITH POWER SOURCE DISCONNECTED, ENSURE GROUND WIRE IS CONNECTED APPROPRIATELY.
8. MAKE WET LOCATION CONNECTIONS WITH AC WIRES AT THE AC-IN SIDE OF THE DRIVER. WHITE IS NEUTRAL, BLACK IS POSITIVE.
9. MAKE WET LOCATION DIMMING AND DMX CONNECTIONS IF REQUIRED/APPROPRIATE.
10. APPLY A BEAD OF CLEAR SILICONE SEALANT TO THE TOP RIM OF THE BOLLARD BODY.
11. ATTACH THE BASEPLATE TO THE INSIDE LEDGE OF THE BOLLARD BODY WITH (4) 1/4" X 1" SCREWS AND (4) 1/4" FLAT WASHERS .
12. PULL THE LV DC SUPPLY WIRES THROUGH THE CENTER OF THE GRILLE CONE AND ATTACH TO BASEPLATE WITH (4) 1/4" - 20 X 1/4" L SET SCREWS.
13. CONNECT SUPPLY WIRES TO THE LIGHT ELEMENT INSTALLED IN THE DOME TOP CAP.
14. TEST TO ENSURE OPERATION.
15. MOUNT THE DOME TOP CAP TO THE GRILLE ASSEMBLY WITH (4) 1/4 - 20 X 1/4" L SET SCREWS.

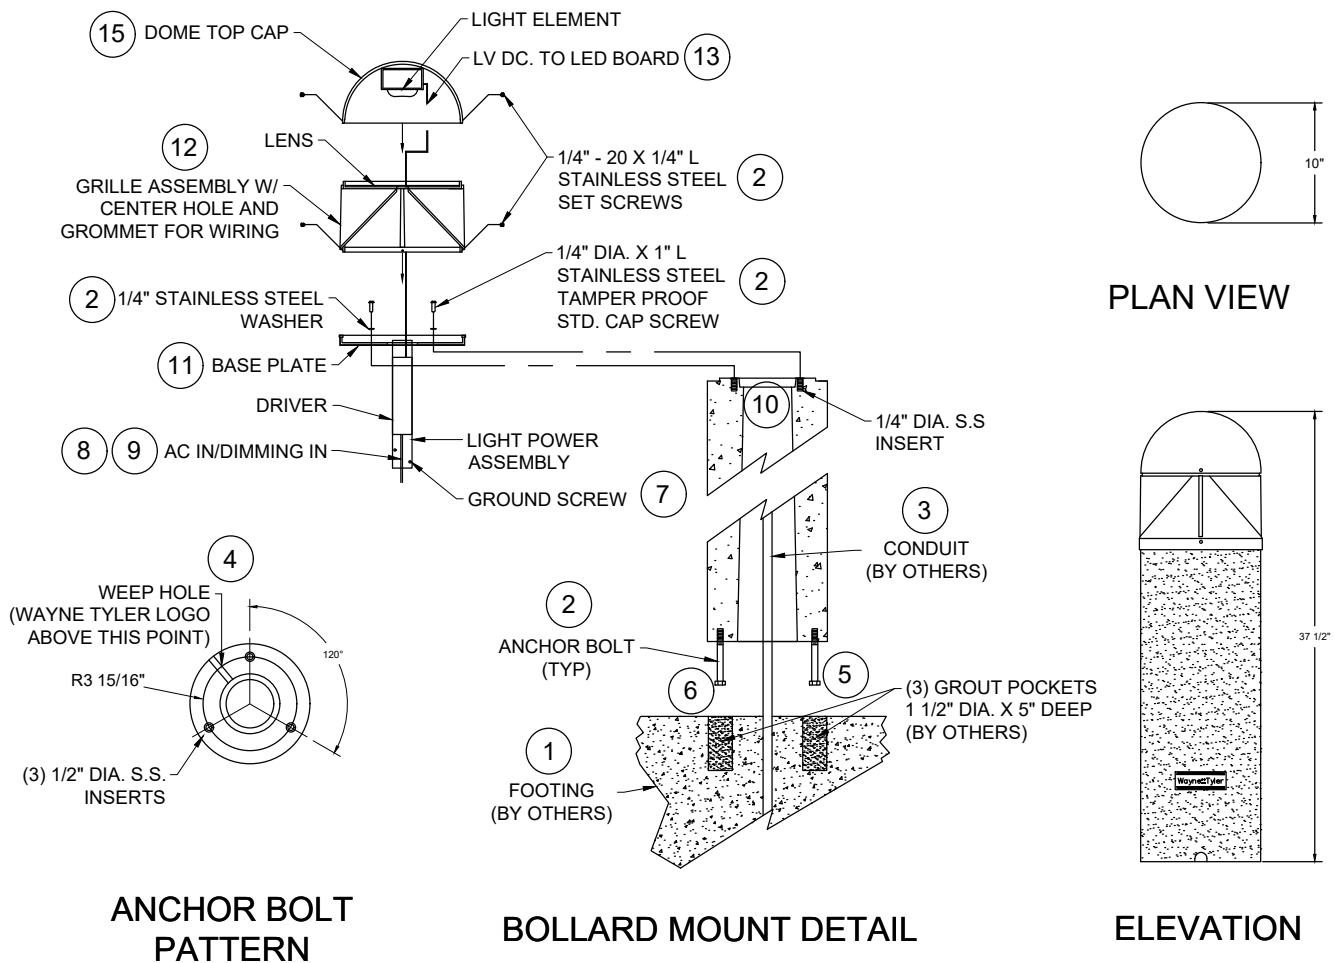

10" DIA X 37 1/2" TALL CONCRETE BOLLARD WITH CAST ALUMINUM DOME TOP	SCALE: N.T.S.
SERIES: 520	DRAWN: JMP
FILE #: WT-520-INSTALL-0326-00	DATE: 03/11/26