



INSTALLATION NOTES:


1. FOOTING MATERIALS & INSTALLATION BY OTHERS. TOOLS BY OTHERS.
2. SCREWS AND BOLTS PROVIDED. AND LIGHT ELEMENT PROVIDED. (SHIPPED WITH BOLLARD).
3. ENSURE FEED CONDUIT AND WIRING WILL BE ACCESSIBLE THROUGH 7/8" DIA THRU HOLE ON BOTTOM OF BOLLARD
4. CHOOSE BOLLARD DIRECTION WITH BOLLARD JUNCTION BOX FACING TO THE BACK. CAST-IN OR CORE DRILL (4) 1 1/2" DIA. X 5" DEEP GROUT POCKETS INTO FOOTING PER ANCHOR BOLT PATTERN
5. TAKE (4) 1/2" DIA. x 4 1/2" LONG ANCHOR BOLTS AND SCREW AN INCH DEEP INTO (4) 1/2" DIA. S.S. THREADED INSERTS, LEAVING 3 1/2" OF THE ANCHOR BOLT EXPOSED.
6. FILL ALL GROUT POCKETS WITH NON-SHRINK GROUT. INSERT BOLLARD WITH ANCHOR BOLTS INTO GROUT POCKETS.
7. PULL AC FEED WIRES TO THE JUNCTION BOX, AND ENSURE GROUND WIRE IS CONNECTED APPROPRIATELY.
8. WITH POWER OFF, MAKE DRIVER AC WIRING CONNECTIONS.
9. MAKE DIMMING CONNECTIONS IF REQUIRED/APPROPRIATE.
10. PLACE LED DRIVER AND WIRES INTO JUNCTION BOX.
11. TEST TO ENSURE OPERATION.
12. ATTACH STAINLESS STEEL COVER OVER JUNCTION BOX WITH (2) PROVIDED SCREWS

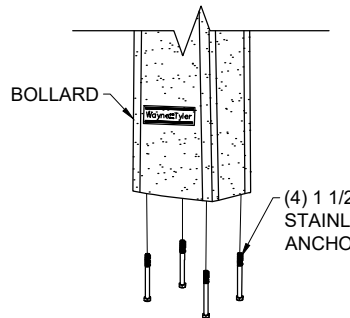


MOUNTING DETAIL

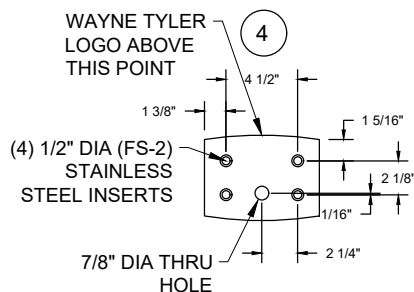


ANCHOR BOLT PATTERN

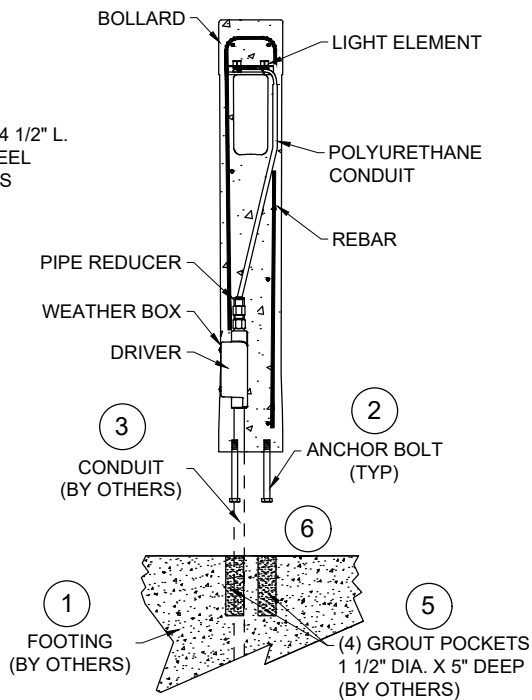

BOLLARD MOUNT DETAIL

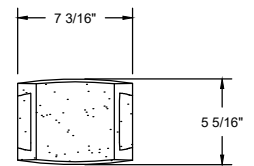

PLAN VIEW

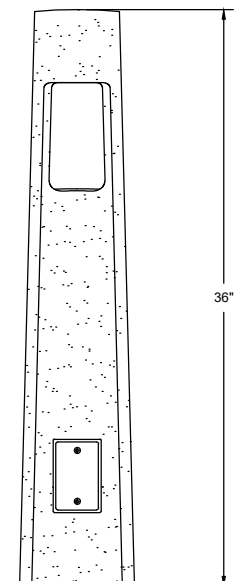

REAR ELEVATION