



INSTALLATION NOTES:


1. FOOTING MATERIALS & INSTALLATION BY OTHERS. TOOLS BY OTHERS.
2. SCREWS AND BOLTS PROVIDED. (SHIPPED WITH BOLLARD).
3. CHOOSE BOLLARD DIRECTION, CAST-IN OR CORE DRILL (4) 1 1/2" DIA. X 5" DEEP GROUT POCKETS INTO FOOTING PER ANCHOR BOLT PATTERN
4. TAKE (4) 1/2" DIA. x 4 1/2" LONG ANCHOR BOLTS AND SCREW AN INCH DEEP INTO (4) 1/2" DIA. S.S. THREADED INSERTS, LEAVING 3 1/2" OF THE ANCHOR BOLT EXPOSED.
5. FILL ALL GROUT POCKETS WITH NON-SHRINK GROUT. INSERT BOLLARD WITH ANCHOR BOLTS INTO GROUT POCKETS.

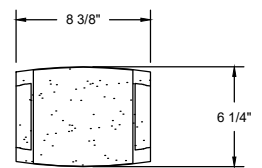


PLAN VIEW

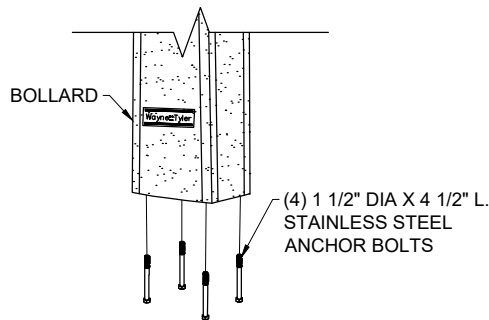


MOUNTING DETAIL

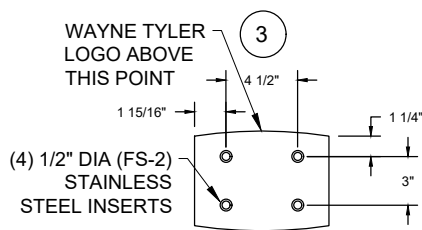

ANCHOR BOLT PATTERN

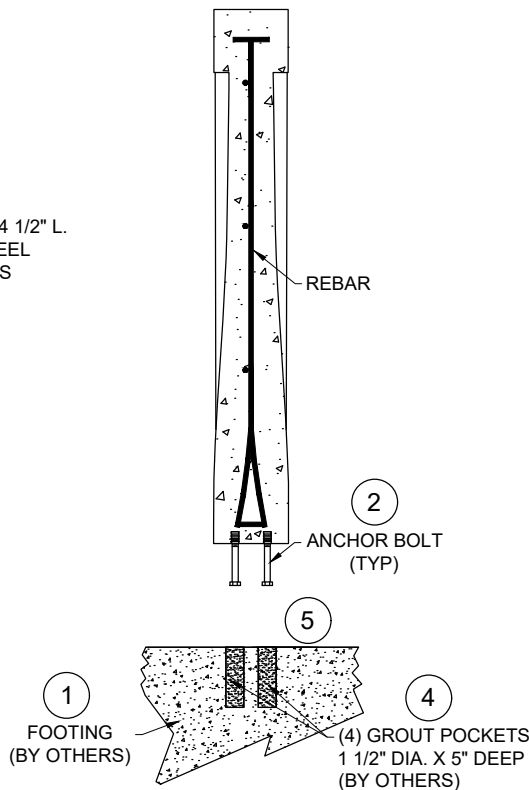

BOLLARD MOUNT DETAIL

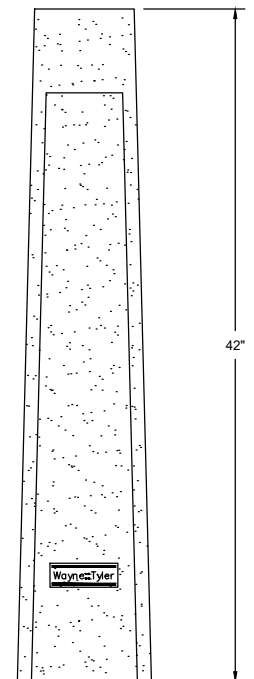

ELEVATION