



INSTALLATION NOTES:


1. FOOTING MATERIALS & INSTALLATION BY OTHERS. TOOLS BY OTHERS.
2. ANCHOR BOLTS PROVIDED.
4. LIMIT SECURITY PIPE EXTENSION INTO BOLLARD 24" MAX. ABOVE GRADE/PLANE OF PAD.
5. CHOOSE DIRECTION WAYNE TYLER LOGO ON BOLLARD WALL SHOULD FACE. CAST-IN OR CORE DRILL (3) 1 1/2" DIA. x 5" DEEP GROUT POCKETS INTO FOOTING PER ANCHOR BOLT PATTERN.
6. TAKE (3) 1/2" DIA. x 4 1/2" LONG ANCHOR BOLTS AND SCREW AN INCH DEEP INTO (3) 1/2" DIA. S.S. THREADED INSERTS, LEAVING 3 1/2" OF THE ANCHOR BOLT EXPOSED.
7. FILL ALL GROUT POCKETS WITH NON-SHRINK GROUT. INSERT BOLLARD WITH ANCHOR BOLTS INTO GROUT POCKETS.

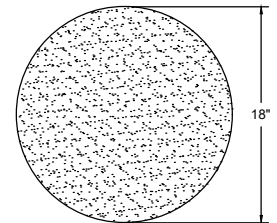


PLAN VIEW

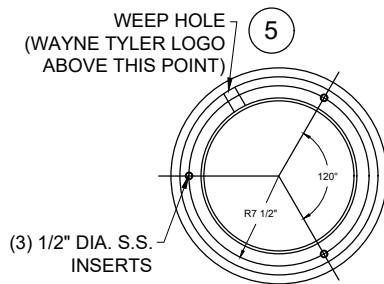

ANCHOR BOLT
PATTERN

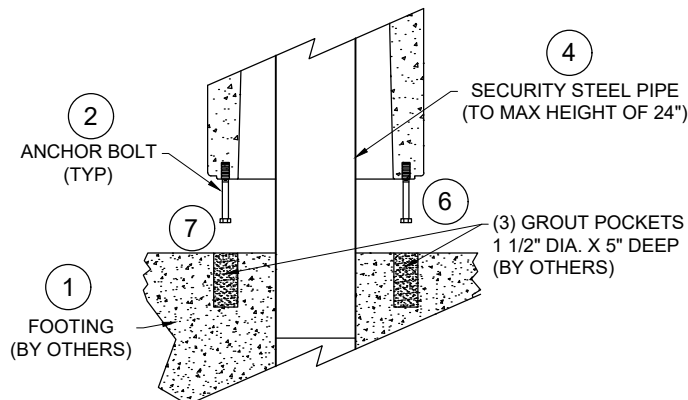

BOLLARD MOUNT DETAIL

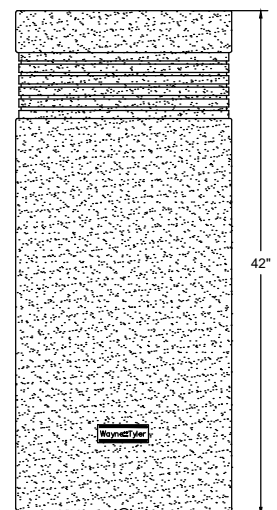

ELEVATION

Wayne :: Tyler

INSTALLATION DRAWING

18" DIA X 42" TALL NON-LIT CONCRETE BARRIER BOLLARD WITH FLAT TOP

SERIES: B210NL

FILE #: WT-B210-NL-INSTALL-0126-00

SCALE: N.T.S.

DRAWN: JMP

DATE: 01/21/26